

Instructions for setting up the Wi-Fi Control console

ATTENTION! Recommended WEB browsers - Internet Explorer, Firefox, Google Chrome.

- External power supply voltage - from 5 to 45V, depending on the voltage used in the antenna switch. Own current consumption is not more than 70mA.
- Power is connected to the INPUT_VDC screw terminals.
- Output current - up to 500 mA
- The screw terminals OUT_TO_SWITCH are used to connect to an external antenna switch. The light indication A1-A8 shows which of the pins present a voltage for the switch.
- Range - up to 50m when using an entry-level wi-fi router
- Case dimensions - 115 * 88 * 55 mm. ABS plastic, degree of protection IP68, cable glands for a diameter of 3 to 7 mm
- The name of the wi-fi network being created is "RKconsole_sn___"
- Network password - "1234567890"
- IP address of the web server on the RKconsole_sn___ network - 192.168.4.1
Links for access:
 - 192.168.4.1/wifi** – wifi settings
 - 192.168.4.1/label** – name of antenna labels
 - 192.168.4.1/switch** – page for switch
 - 192.168.4.1/toggle** – page for toggle switch
 - 192.168.4.1** – start page



Before you start setting up, your router must have DHCP enabled!

When you first turn on, you need to connect the controller to your WI-FI network. To do this, you must search for available networks on your smartphone or computer. The switch creates a network "RKconsole_sn___" password "1234567890".

After connecting the network, go to the web browser at "http://192.168.4.1/wifi". A window with wifi settings will open. You must enter the name and password of your network and click "Connect / Disconnect"

After that, at the address "http://192.168.4.1/wifi" you can see the IP address of the device in your WI-FI network. Now that the switch is connected to your network, you can disconnect from the "RKconsole_sn___" network. Further, to access the switch's web server, use the IP address issued by your wifi router.

WI-FI Control Console for hamradio

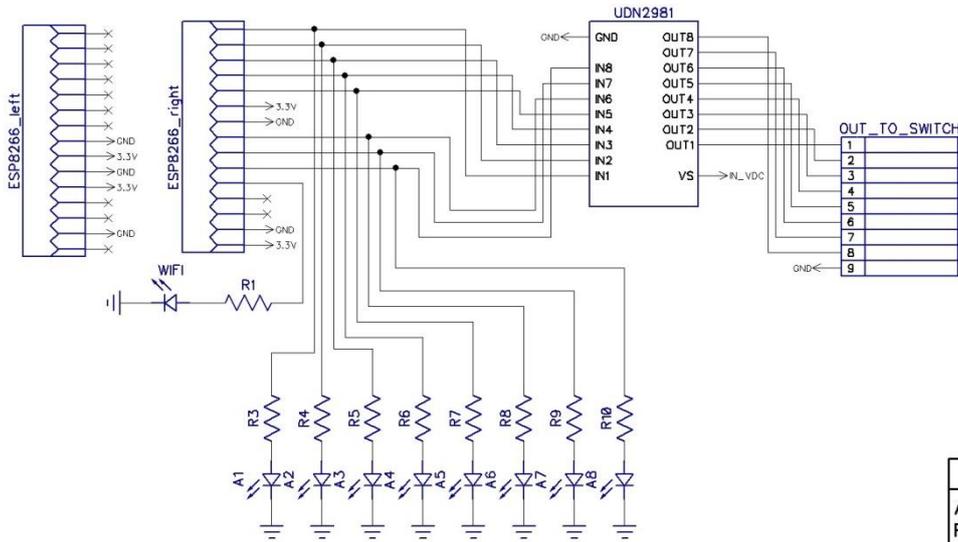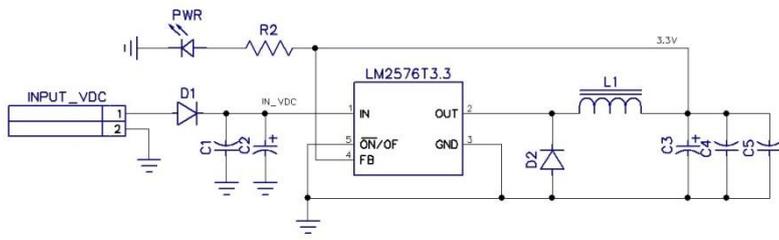

| RefDes | Value | Name |
|---------------------|------------|---------------|
| A1-A8, PWR,Wi-Fi | LED SMD | FYLS-0805 |
| C1,C4 | 100n | CAP_1206 |
| C2,C3 | 1000uF 50V | CAP200RP |
| C5 | 10n | CAP_1206 |
| D1,D2 | | 1N5822 |
| L1 | 100uH | RLB0914-101KL |
| R1-R10 | 1k | RES_1206 |